



**1560-PDP**  
PROFIBUS™ Adapter  
for  
Allen-Bradley SCANport Devices

User Manual  
Rev 2

ProSoft Technology Inc.  
5201 Truxtun Avenue, Third Floor  
Bakersfield, CA 93309  
(661) 716-5100  
(661) 716-5101 fax  
<http://www.prosoft-technology.com>  
E-mail: [prosoft@prosoft-technology.com](mailto:prosoft@prosoft-technology.com)

## **Please Read This Notice**

Successful application of the 1560-PDP card requires a reasonable working knowledge of the Allen-Bradley hardware to be interfaced with, and the application on which the combination is to be used. For this reason, it is important that those responsible for implementing the 1560-PDP satisfy themselves that the 1560-PDP and Allen-Bradley hardware combination will meet the needs of the application without exposing personnel or equipment to unsafe or inappropriate working conditions.

This manual is provided to assist the user. Every attempt has been made to assure that the information provided is accurate and a true reflection of the product's installation requirements. In order to assure a complete understanding of the operation of the 1560-PDP, the user should read all applicable documentation on the operation of the Allen-Bradley hardware.

Under no conditions will ProSoft Technology, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of the 1560-PDP product.

Reproduction of the contents of this manual, in whole or in part, without written permission from ProSoft Technology, Inc. is prohibited.

Information in this manual is subject to change without notice and does not represent a commitment of the part of ProSoft Technology, Inc. Improvements and/or changes in this manual or the product may be made at any time. These changes will be made periodically to correct technical inaccuracies or typographical errors.

**WARNING**

The 1560-PDP card will allow remote access to commands in the Allen-Bradley drives and other SCANport compatible devices. The user is responsible for assuring that any applicable regulations concerning the remote operation of the equipment are adhered to.

## **Quick Start Guide**

In this section we have assembled a simple step-by-step procedure for installing and making the 1560-PDP unit operational. This discussion presumes that the application decision such as PROFIBUS addressing and hierarchy, SCANport cable length, etc. have been addressed prior to this point.

### **Step-by-Step**

The following steps will allow the 1560-PDP to be setup in the shortest period of time (the following steps refer to the Allen-Bradley drive implementation. Similar steps are followed when interfacing to other A-B Power Division products):

- 1      Set the dip switches  
        The 1560-PDP dip switch positions are detailed in Section 3.
- 2      Mount the 1560-PDP on the DIN rail  
        See Section 3 for mounting instructions.
- 3      Connect power to the 1560-PDP  
        Refer to Section 3.
- 4      Setup the Drive hardware  
        Refer to the appropriate drive manual to connect control and power the drive. This aspect of the drive installation is out of the scope of this manual.
- 5      Setup the Drive parameters  
        See Appendix A of the manual for assistance in setup of the drive parameters.
- 6      Install the SCANport cable between the drive and the 1560-PDP.
- 7      Connect the PROFIBUS cable between the host system and the 1560-PDP.
- 8      Retrieve the 1560-PDP GSD file, **psft087c.gsd** (downloadable from our web site at [www.prosoft-technology.com](http://www.prosoft-technology.com)) and import into your PROFIBUS configuration software.
- 9      Map the appropriate drive information and parameters to your addresses. The User must configure the Siemens Profibus Binary file using a Siemens compatible utility, importing the GSD file and configuring the I/O image as desired. A minimum configuration would normally include the Output Image(13 words) and the Input Image (11 words)
- 10     The unit will auto-baud once connected to the network

## Table of Contents

1	Product Specifications .....	1
2	Mounting and SCANport Cabling Instructions.....	2
2.1	Mounting Instructions .....	2
2.2	Cable Requirements .....	3
2.3	Hardware Setup .....	4
2.4	LED Indications .....	5
2.5	Dip Switch Settings .....	5
3	Adding 1560-PDP to Profibus Network Configuration.....	8
	Step 1 : Select the 1560-PDPSCANport( <i>Adapter</i> ).....	8
	Step 2 : Select Configure Slave Parameters .....	8
	Step 3 : Select Configure .....	9
	Step 4 : Parameterize .....	9
	Step 5 : Assign I/O Addresses .....	10
	Step 6 : Save the Profibus Configuration.....	10
	Appendix A : Device Specific Hints.....	11
A.1	SMC Dialogue Plus .....	11
A.2	SMP 3.....	11
A.3	Variable Speed Drives.....	11
	Appendix B : SCANport Datalink Operation.....	13
	Appendix C : Repair and Warranty.....	14
	Appendix D : PSFT087C.GSD File .....	15
	Appendix E : Profibus Data Image Details .....	20
E.1	Adapter Input Image (Read from 1560-PDP).....	20
E.2	Adapter Status Image (Read from 1560-PDP).....	21
E.3	Parameters Image (Read from 1560-PDP) .....	22
E.4	Adapter Output Image (Write to 1560-PDP).....	23

## Revisions

1.0 2	8/25/98	Started with Revision 1.4 (6/30/98) of the 1560-MBP module.
1.1 3	12/7/98	Modified spare byte so that all data is on word boundary for input and output images
1.2 4	01/05/99	Attempt to get Profibus LED to respond to states of engine, and to get scanport to fault when loss of Profibus exists
1.3 5	10/12/99	At Profibus Test Lab in Johnson City, TN - Change Set Address handling to return no response - Did not have fully disabled - Cfg handling on default. Did not have this set correctly where the default actual and default to spc 3 were not equal - added CommTimeoutMultiplier based on SW2-1:3 (0 to 7) where 0 == 1 - added call to 0 ssa_buf_ptr after spc3 init because otherwise address change generated a short response

## 1 Product Specifications

The ProSoft Technology, Inc. 1560-PDP card is a hardware product designed to be a communications front end for Allen-Bradley SCANport compatible products (1336 Plus, 1336 Plus II, 1397, Force, Vector, 1305, SMC Dialogue Plus, SMP3, etc.)

### Communication Specifications

Name	Description
Protocol	Profibus DP Slave using SPC3 chipset
Baud Rate	Up to 12 M Baud Mx
Supported Profibus features	Input/Output data types Supports the high speed transfer of Control/Reference, Status/Feedback and up to 8 Datalinks in and Out
Pre-Assigned Map	Command Control and Reference Status/Feedback Datalinks In and Out: A to D Up to 32 parameter values


### General Specifications

Name	Description
Configurable via dipswitches	Node Address: 1 to 126 Fault on Loss of Comm SCANport Messaging options <ul style="list-style-type: none"> <li>- No Datalinks</li> <li>- Datalinks A only</li> <li>- Datalinks A &amp; B only</li> <li>- Datalinks A,B,C &amp; D</li> </ul>
Profibus port Connection	Female DB-9 (Standard Profibus)
SCANport Connection	SCANport connector, using standard SCANport cable from distributor
Pre-Assigned Map	Command Control and Reference Status/Feedback Datalinks In and Out: A to D Up to 32 parameter values
Status LEDs	SCANport Status (bi-color Red/Green) Profibus Status (bi-color Red/Green)
Current Consumption	65ms at 24 VDC
Input Voltage	85 to 264 VAC, 1 phase, 45-63 Hz (Optional 24 VDC)
Storage Temperature	-40 to 85C
Operating Temperature	0 to 50C

## 2 Mounting and SCANport Cabling Instructions

### 2.1 Mounting Instructions

Following are the mounting dimensions and layout drawings for the enclosed style communication module, such as the 1560-PDP. The following drawings are excerpted from A-B document 1203-5.5.

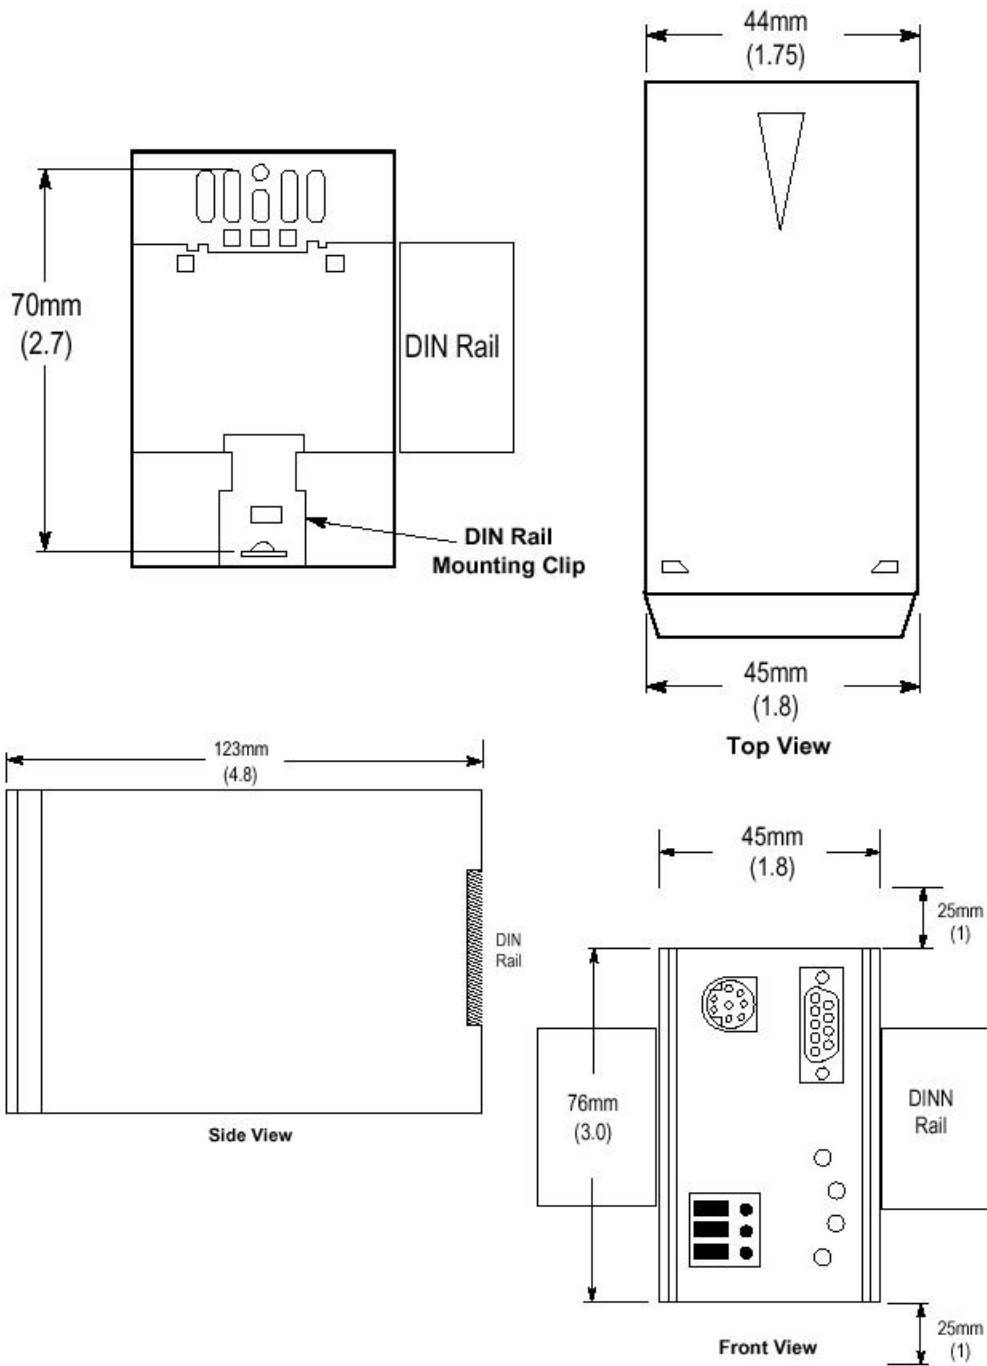


## 2.2 Cable Requirements

SCANport cables are available in either Male to Male or Male to Female configurations. Cables of up to 10 meters (33 feet) can be connected from the SCANport device to the 1560-PDP. If a Port Expander is used, the cable length from the master to the Port Expander must be subtracted from the cable length used to connect the device to the expander ( $B1 + C = \text{max } 10 \text{ meters}$ ).


Generally when selecting a SCANport cable, the Male-Male configuration will be used. This is true in all cases when connecting to Ports 2 through 5. If connecting to the HIM port (Port 1) the Mail-Female cable will be required.

Please verify with the Installation Manual for the A–B device the correct cable configuration. The following drawing, excerpted from A-B document 1203-5.2, is an example for a 1305 drive installation.

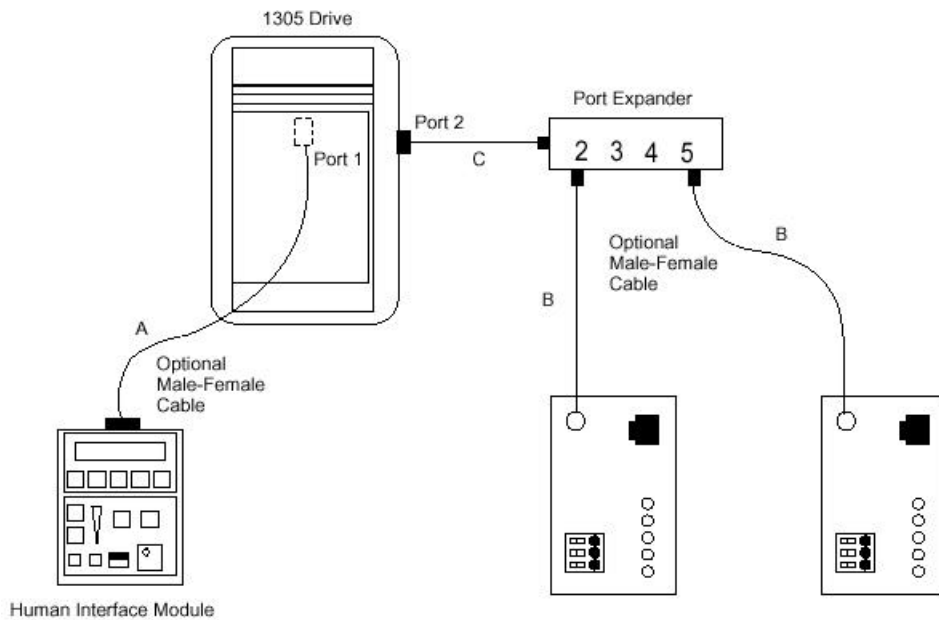


**2.3 Hardware Setup**

The layout of the LEDs and the connectors on the 1560-PDP is shown in the diagram below. The power connections for 120/240VAC and the 24VDC are also shown.

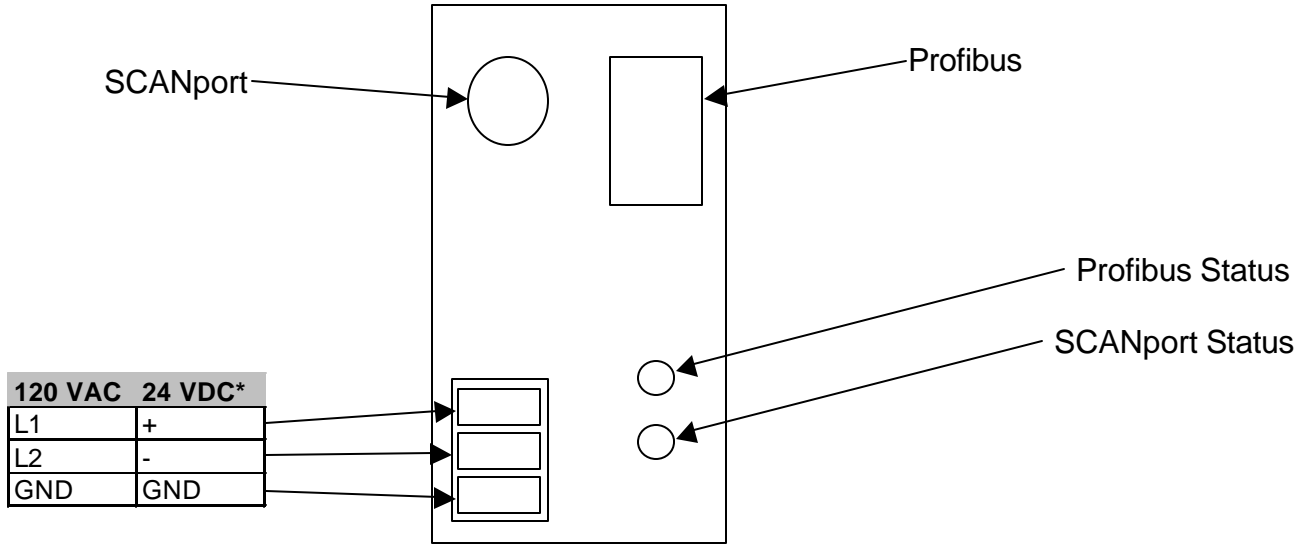

- \* 1560-PDP1 PROFIBUS to SCANport Communication Adapter - 120VAC
- \* 1560-PDP2 PROFIBUS to SCANport Communication Adapter - 24VDC

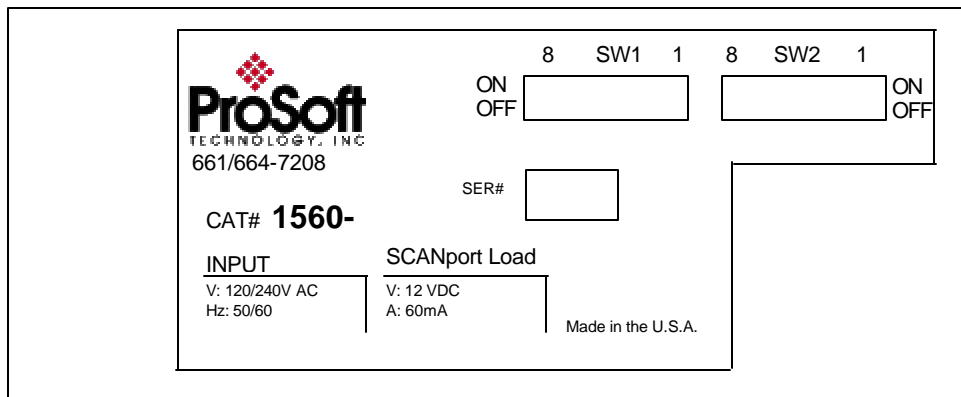




**2.4 LED Indications**

NAME	Color	Status	Indication
Profibus Status	Green	Steady	Profibus connection is in place with the host
	Red	Steady	Profibus connection is not good. Check that the Profibus cable is connected to a host. Also, verify that the Profibus network is correctly terminated.
		Blinking	Profibus connection is in place with the host, but possibly a bad configuration has been detected (Input or Output map duplicated, or more than 5 map images entered in configuration utility for this slave)
SCANport Status	Green	Steady	SCANport connection if OK
	Green	Blinking	Check cable connections. Indicates that the 1560 unit is not able to link up with the drive's SCANport. Make sure that the A-B device supports Datalinks if the 1560 Datalinks are enabled.
	Red	Steady	The SCANport connection has faulted. Check configuration switch settings, SCANport cable connections, cycle power. Contact ProSoft factory support if problem persists.

**2.5 Dip Switch Settings**

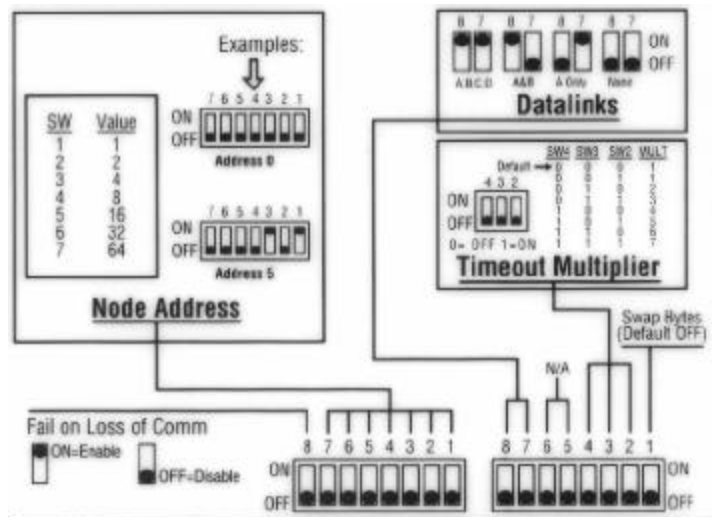

**Example Switch Setting (Shipped Configuration)**

<b>Switch</b>	<b>8 7 6 5 4 3 2 1</b>	
SW1	1 0 0 0 0 1 0 1	Comm Fail Enabled Node #5
SW2	1 1 0 0 0 0 0 0	All Datalinks enabled No Bytes Swapping

**1560-PDP**  
**PROFIBUS – SCANport Adapter**

Dip Switches – SW1								Name	Description																																																																
8	7	6	5	4	3	2	1																																																																		
	X	X	X	X	X	X	X	Node Address	Selects the Profibus Node address for this adapter. Binary weighting on dip switches as follows: <table style="margin-left: 20px;"> <tr> <td><u>Bit</u></td> <td><u>Value</u></td> </tr> <tr> <td>0</td> <td>1</td> </tr> <tr> <td>1</td> <td>2</td> </tr> <tr> <td>2</td> <td>4</td> </tr> <tr> <td>3</td> <td>8</td> </tr> <tr> <td>4</td> <td>16</td> </tr> <tr> <td>5</td> <td>32</td> </tr> <tr> <td>6</td> <td>64</td> </tr> </table> Example: <table style="margin-left: 20px;"> <tr> <td><u>6</u></td> <td><u>5</u></td> <td><u>4</u></td> <td><u>3</u></td> <td><u>2</u></td> <td><u>1</u></td> <td><u>0</u></td> <td><u>Addr</u></td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>2</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> <td>3</td> </tr> <tr> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>127</td> </tr> </table>	<u>Bit</u>	<u>Value</u>	0	1	1	2	2	4	3	8	4	16	5	32	6	64	<u>6</u>	<u>5</u>	<u>4</u>	<u>3</u>	<u>2</u>	<u>1</u>	<u>0</u>	<u>Addr</u>	0	0	0	0	0	0	1	1	0	0	0	0	0	1	0	2	0	0	0	0	0	1	1	3	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	127
<u>Bit</u>	<u>Value</u>																																																																								
0	1																																																																								
1	2																																																																								
2	4																																																																								
3	8																																																																								
4	16																																																																								
5	32																																																																								
6	64																																																																								
<u>6</u>	<u>5</u>	<u>4</u>	<u>3</u>	<u>2</u>	<u>1</u>	<u>0</u>	<u>Addr</u>																																																																		
0	0	0	0	0	0	1	1																																																																		
0	0	0	0	0	1	0	2																																																																		
0	0	0	0	0	1	1	3																																																																		
-	-	-	-	-	-	-	-																																																																		
1	1	1	1	1	1	1	127																																																																		
X								Loss of Comm Failure Enable	The action that the adapter will take upon detecting loss of control from a Siemens host. This action will not be enabled until an initial Output Command has been received from the host, and the Timeout has expired (See SW2 table below): 0 = Disable Failure 1 = Enable Failure																																																																

Dip Switches – SW2								Name	Description																		
8	7	6	5	4	3	2	1																				
							X	Byte Swap (Default off)	Position is a function of the Profibus host device 1 for Siemens S5 0 for all others																		
				X	X	X		Loss of Comm Timeout Multiplier	The adapter has a default timeout of 120ms. To adjust this value, use the following positions: Timeout <table style="margin-left: 20px;"> <tr> <td><u>432</u></td> <td><u>Value</u></td> </tr> <tr> <td>000</td> <td>120ms</td> </tr> <tr> <td>001</td> <td>120ms</td> </tr> <tr> <td>010</td> <td>240ms</td> </tr> <tr> <td>011</td> <td>360ms</td> </tr> <tr> <td>100</td> <td>480ms</td> </tr> <tr> <td>101</td> <td>600ms</td> </tr> <tr> <td>110</td> <td>720ms</td> </tr> <tr> <td>111</td> <td>840ms</td> </tr> </table>	<u>432</u>	<u>Value</u>	000	120ms	001	120ms	010	240ms	011	360ms	100	480ms	101	600ms	110	720ms	111	840ms
<u>432</u>	<u>Value</u>																										
000	120ms																										
001	120ms																										
010	240ms																										
011	360ms																										
100	480ms																										
101	600ms																										
110	720ms																										
111	840ms																										

(Continued)


Dip Switches – SW2								Name	Description
8	7	6	5	4	3	2	1		
		X	X					Not Used	
X	X							Datalink Enable	Determines how many datalink parameters to exchange between the drive and the 1560-PDP adapter: <u>87</u> <u>Datalinks</u> 00      None 01      A 10      A& B 11      A,B,C,D

### 3 Adding 1560-PDP to Profibus Network Configuration


The User must configure the Siemens Profibus Binary file using a Siemens compatible utility, importing the GSD file and configuring the I/O image as desired. A minimum configuration would normally include the Output Image (13 words) and the Input Image (11 words)

The configuration shown below was developed using COM PROFIBUS version 3.3. Different versions of configuration utilities may appear different, but the concepts should be similar.

#### Step 1 : Select the 1560-PDPSCANport(Adapter)

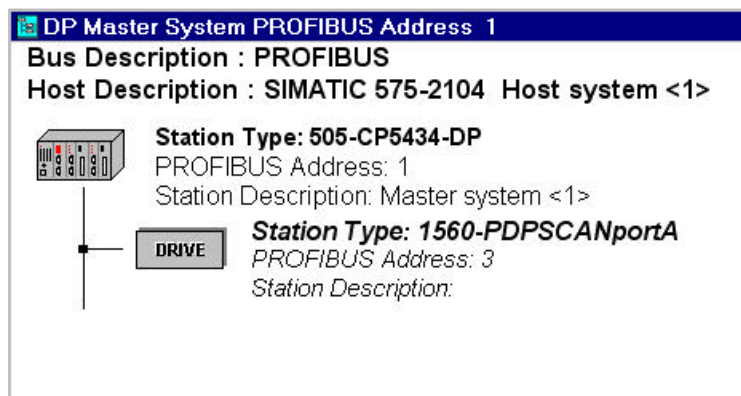


#### Step 2 : Select Configure Slave Parameters

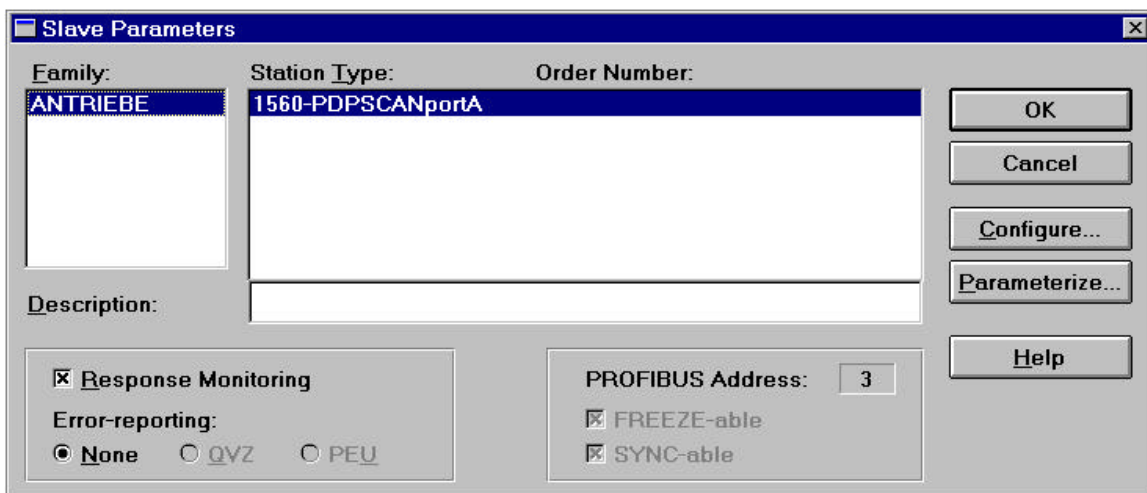

**Step 3 : Select Configure**

*Choose what adapter information you wish to access.*

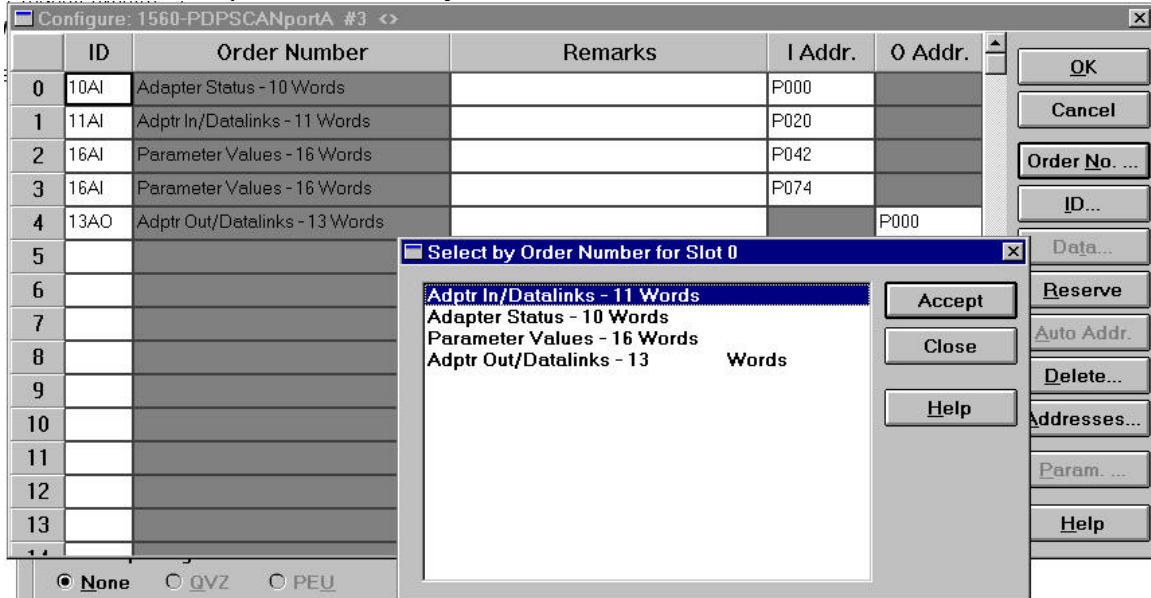


A detailed description of the available options for configuring the adapter is available in the Appendix. See the Appendix for details on:

- Input IN/Datalinks – 11 words
- Adapter Out/Datalinks – 13 words
- Adapter Status – 10 words
- Parameter Values – 16 words

The most common configuration is to select the *Adapter In and Adapter Out* options.


**Step 4 : Parameterize**

*If you will be accessing the Drive Parameters press the Parameterize button and enter the parameter information. Enter the total number you will be accessing (up to 32) and enter the parameter numbers.*

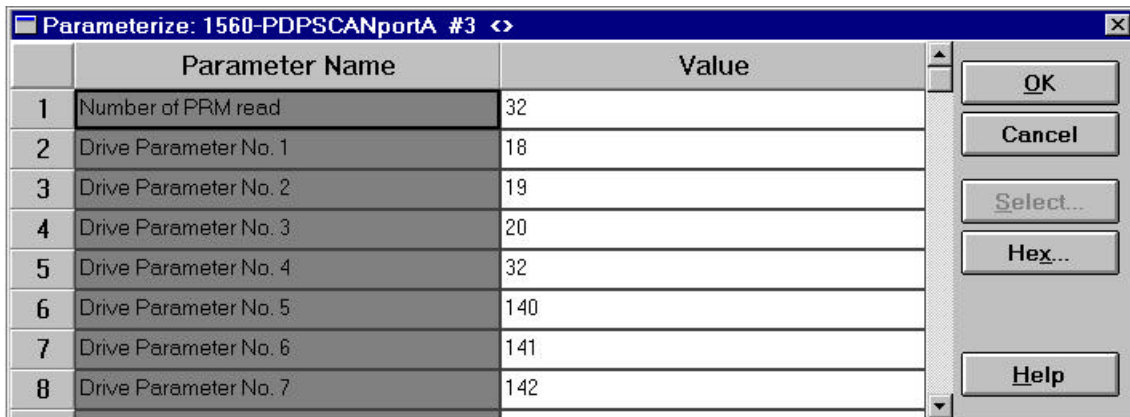

**Step 5 : Assign I/O Addresses**

*Choose what address will be associated with each data point, or let COM PROFIBUS decide by selecting **Auto Address**.*

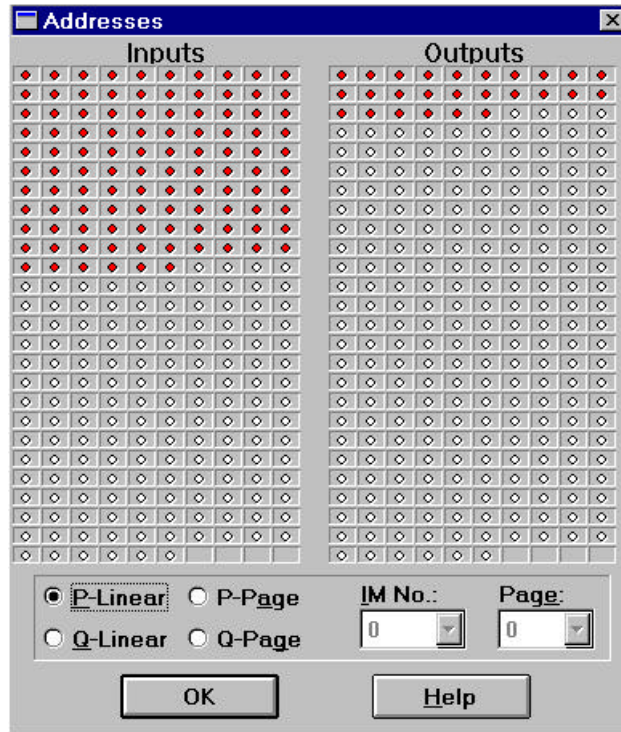

**Step 6 : Save the Profibus Configuration**

Save the PROFIBUS network configuration. Use this configuration along with your PLC programming software to setup control and monitoring of your AB drive.

## **Appendix A : Device Specific Hints**

### **A.1 SMC Dialogue Plus**

The SMC Dialogue Plus does not support Datalinks, therefore the configuration of SW2-7 and 8 should not include any of the Datalinks Enabled. If a Datalink is enabled, the SCANport Status LED will toggle, indicating an error in the SCANport communications. The version of SMC which was tested (Rev 1.05) had 88 parameters. The 1560-PDP is able to read 32 of the parameters out of the SMP3 unit.

### **A.2 SMP 3**

The SMP3 does not support Datalinks, therefore the configuration of Datalinks should not include any of the Datalinks Enabled. If a Datalink is enabled, the SCANport Status LED will toggle, indicating an error in the SCANport communications. The 1560-PDP is able to read 32 of the parameters out of the SMP3 unit.

### **A.3 Variable Speed Drives**

In order to enable Frequency control from the 1560-PDP, the drive parameter FREQUENCY SELECT 2 must be configured for the appropriate Adapter ID representing the 1560-PDP module. This will normally be Adaptor #2, unless a SCANport expander is being used (in which case this Adaptor number will be based on the port the 1560-PDP is plugged into).

#### **Setting up the Adaptor I/O - Datalinks Out**

Selects the parameter values which will be made available from the 1560-PDP via Global Data Out. Placement of the values in the 1560-PDP is referenced in Section #

<b>Data Out Image</b>	<b>Suggested Parameter</b>	<b>Description</b>
A1 A2	54 1	Output Current Output Volts
B1 B2	23 53	Output Power DC Bus Voltage
C1 C2		
D1 D2	19 4	Max Frequency Last Fault

#### **Setting up the Adaptor I/O - Data In**

Selects the parameters which will be made accessible for configuration/ writing from the 1560-PDP. As with the Data Out parameters, there are eight possible selections. These may be chosen by the programmer to meet the needs of the application.

**Logic Control Word**

Since the most common implementation of the 1560-PDP is with the variable speed drives, we have included the following table for the more commonly used control bits. This word should be verified in the A-B User Manual for the particular device being controlled.

<b>Bit</b>	<b>Function</b>	<b>Description</b>
0	Stop	1 = Stop, 0 = Not Stop
1	Start	1 = Start, 0 = Not Start
2	Jog	1 = Jog, 0 = Not Jog
3	Clear Faults	1 = Clear, 0 = Not Clear
4,5	Direction	00 = No Command 01 = Forward 10 = Reverse 11 = Hold Direction

**Drive Status Word**

Since the most common implementation of the 1560-PDP is with the variable speed drives, we have included the following table for the more commonly used Status bits. This word should be verified in the A-B User Manual for the particular device being monitored.

<b>Bit</b>	<b>Function</b>	<b>Description</b>
0	Enabled	1 = Enabled
1	Running	1 = Running
2	Cmd Direction	1 = Forward, 0 = Reverse
3	Actual Direction	1 = Forward, 0 = Reverse
4	Accel	1 = Accelerating
5	Decel	1 = Decelerating
6	Alarm	1 = Alarm Active
7	Fault	1 = Fault Active
8	At Speed	1 = At Speed



## Appendix B : SCANport Datalink Operation

(Excerpted from A-B Publication 1203-5.2 - May 1995)

In the following discussion, the term 'Datalink' is used extensively. When configuring some SCANport devices, the term 'Adaptor I/O' is used in place of Datalink.

A Datalink is a type of pointer used by some SCANport devices to transfer information between a SCANport communication interface (such as the 1560-PDP) and a SCANport device (such as a VFD, SMP3, etc.). Datalinks allow parameter values to be written when the Control Command and Reference are sent to the SCANport device. Datalinks also allow parameter values to be read whenever the Status and Feedback values are read from the SCANport device.

SCANport devices that support Datalinks have a group of parameters for Datalink configuration. These parameters are identified as 'Datalink In' and Datalink Out' parameters. The Datalink functions are enabled by setting the appropriate dip switches on SW1 and by configuring the 'Datalink In' and Datalink Out' adapter I/O parameters in the SCANport device.

Each Datalink consists of two 16-bit words of input and two 16-bit words of output. Each of the two input words can be configured to write to a different destination parameter inside the SCANport device by setting the two 'Datalink In' parameters for that Datalink to the desired destination parameters. Similarly, each of the two output words is configured by setting the two 'Datalink Out' parameters for that Datalink. If a Datalink is enabled the value of the parameters pointed to by the 'Datalink Out' parameters will be transferred to the 1560-PDP. Conversely, data values sent into the Datalink registers will be written to the parameter locations configured in the 'Datalink In' parameters. If a Datalink is not enabled, any data sent to the corresponding 1560-PDP data space will be ignored.

If no 'Datalink In' parameter is configured the SCANport device will ignore it. The same is true for a 'Datalink Out' parameter. A zero usually represents an un-configured Datalink.

## **Appendix C : Repair and Warranty**

### **Service and Repair**

The 1560-PDP card is an electronic product, designed and manufactured to function under somewhat adverse conditions. As with any product, through age, misapplication, or any one of many possible problems, the card may require repair. The 1560-PDP product has a one year parts and labor warranty according to the limits specified in the warranty. Replacement and/or returns should be directed to the distributor from whom the product was purchased. If you need to return the card for repair, it is first necessary to obtain an RMA number from ProSoft Technology. Please call the factory for this number and display the number prominently on the outside of the shipping carton used to return the card.

### **General Warranty Policy**

ProSoft Technology, Inc. (Hereinafter referred to as ProSoft) warrants that the Product shall conform to and perform in accordance with published technical specifications and the accompanying written materials, and shall be free of defects in materials and workmanship, for the period of time herein indicated, such warranty period commencing upon receipt of the Product. This warranty is limited to the repair and/or replacement, at ProSoft's election, of defective or non-conforming Product, and ProSoft shall not be responsible for the failure of the Product to perform specified functions, or any other non-conformance caused by or attributable to: (a) any misapplication or misuse of the Product; (b) failure of Customer to adhere to any of ProSoft's specifications or instructions; (c) neglect of, abuse of, or accident to, the Product; or (d) any associated or complementary equipment or software not furnished by ProSoft. Limited warranty service may be obtained by delivering the Product to ProSoft and providing proof of purchase or receipt date. Customer agrees to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to ProSoft, and to use the original shipping container or equivalent. Contact ProSoft Customer Service for further information.

### **Limitation of Liability**

EXCEPT AS EXPRESSLY PROVIDED HEREIN, PROSOFT MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH RESPECT TO ANY EQUIPMENT, PARTS OR SERVICES PROVIDED PURSUANT TO THIS AGREEMENT, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NEITHER PROSOFT OR ITS DEALER SHALL BE LIABLE FOR ANY OTHER DAMAGES, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION IN CONTRACT OR TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY), SUCH AS, BUT NOT LIMITED TO, LOSS OF ANTICIPATED PROFITS OR BENEFITS RESULTING FROM, OR ARISING OUT OF, OR IN CONNECTION WITH THE USE OR FURNISHING OF EQUIPMENT, PARTS OR SERVICES HEREUNDER OR THE PERFORMANCE, USE OR INABILITY TO USE THE SAME, EVEN IF PROSOFT OR ITS DEALER'S TOTAL LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT.

Where directed by State Law, some of the above exclusions or limitations may not be applicable in some states. This warranty provides specific legal rights; other rights that vary from state to state may also exist. This warranty shall not be applicable to the extent that any provisions of this warranty is prohibited by any Federal, State or Municipal Law that cannot be preempted.

### **Hardware Product Warranty Details**

Warranty Period: ProSoft warranties hardware product for a period of one (1) year.

### **Warranty Procedure:**

Upon return of the hardware Product ProSoft will, at its option, repair or replace Product at no additional charge, freight prepaid, except as set forth below. Repair parts and replacement Product will be furnished on an exchange basis and will be either reconditioned or new. All replaced Product and parts become the property of ProSoft. If ProSoft determines that the Product is not under warranty, it will, at the Customer's option, repair the Product using current ProSoft standard rates for parts and labor, and return the Product freight collect.

## Appendix D : PSFT087C.GSD File

```
=====
; GSD-file example for ProSoft Technology 1560-PDP Profibus Adapter
;   Date: 09.19.98
;   Profibus DP Slave
;   Language : English
;   GSD Rev 2 Date: 02-24-99
;                               10-15-99 modified
=====
#Profibus_DP
;
ExtUserPrmData=1 "Number of PRM read"      ;
Unsigned8 0 0-32
EndExtUserPrmData
ExtUserPrmData=2 "Drive Parameter No. 1"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=3 "Drive Parameter No. 2"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=4 "Drive Parameter No. 3"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=5 "Drive Parameter No. 4"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=6 "Drive Parameter No. 5"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=7 "Drive Parameter No. 6"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=8 "Drive Parameter No. 7"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=9 "Drive Parameter No. 8"  ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=10 "Drive Parameter No. 9" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=11 "Drive Parameter No. 10" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=12 "Drive Parameter No. 11" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=13 "Drive Parameter No. 12" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=14 "Drive Parameter No. 13" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=15 "Drive Parameter No. 14" ;
Unsigned8 0 0-255
```

```
EndExtUserPrmData
ExtUserPrmData=16 "Drive Parameter No. 15" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=17 "Drive Parameter No. 16" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=18 "Drive Parameter No. 17" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=19 "Drive Parameter No. 18" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=20 "Drive Parameter No. 19" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=21 "Drive Parameter No. 20" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=22 "Drive Parameter No. 21" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=23 "Drive Parameter No. 22" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=24 "Drive Parameter No. 23" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=25 "Drive Parameter No. 24" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=26 "Drive Parameter No. 25" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=27 "Drive Parameter No. 26" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=28 "Drive Parameter No. 27" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=29 "Drive Parameter No. 28" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=30 "Drive Parameter No. 29" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=31 "Drive Parameter No. 30" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=32 "Drive Parameter No. 31" ;
Unsigned8 0 0-255
EndExtUserPrmData
ExtUserPrmData=33 "Drive Parameter No. 32" ;
Unsigned8 0 0-255
EndExtUserPrmData
;
GSD_Revision = 2
```

**1560-PDP**  
**PROFIBUS – SCANport Adapter**


```
Vendor_Name   = "ProSoft Technology Inc"
Model_Name    = "1560-PDP SCANport Adapter"
Revision      = "Rev 1.0 - 1";
Ident_Number  = 0x087C    ; Need official ID from PTO
Protocol_Ident = 0        ; 0 = Profibus DP
Station_Type  = 0         ; 0 = DP Slave
FMS_supp     = 0         ; No FMS support
Hardware_Release = "01"    ; Not a function of Hardware Release
Software_Release = "1"     ; Batch Number
;
; Supported Baud Rates
9.6_supp     = 1
19.2_supp    = 1
93.75_supp   = 1
187.5_supp   = 1
500_supp     = 1
1.5M_supp    = 1
3M_supp      = 1
6M_supp      = 1
12M_supp     = 1
;
; Maximum Responder time for supported baud rates
MaxTsdr_9.6      = 60
MaxTsdr_19.2     = 60
MaxTsdr_93.75   = 60
MaxTsdr_187.5   = 60
MaxTsdr_500     = 100
MaxTsdr_1.5M    = 150
MaxTsdr_3M      = 250
MaxTsdr_6M      = 450
MaxTsdr_12M     = 800
;
; Supported hardware features
Redundancy = 0                ; Not supported
Repeater_Ctrl_Sig = 2        ; TTL
24V_Pins = 0                 ; Not Connected
Implementation_Type= "SPC3"
;
;
; Supported DP Features
Freeze_Mode_supp = 1          ; supported
Sync_Mode_supp   = 1          ; supported
Auto_Baud_supp   = 1          ; supported
Set_Slave_Add_supp= 0        ; DIP Switch config address
;
;
; Maximum Polling Frequency
Min_Slave_Intervall = 1       ; 100 us
;
; Device Type
Slave_Family      = 1         ; 1 = Drives
;
; Maximum supported sizes
Modular_Station  = 1          ; Compact station - Predefined I/O
Max_Module       = 5
```

```
Max_Input_Len = 106           ; 10 words + 1 Diag Control
                               ; 10 words - Status Input Data
                               ; 16 words - Parameter Read Block
                               ; 16 words - Parameter Read Block
Max_Output_Len = 26          ; 12 words + 1 Diag Control
Max_Data_Len = 132
;
Max_Diag_Data_Len = 10
;
; Default Length of User Parameter
User_Prm_Data_Len = 34       ; List of Parameters in Drive to
read back
;
; First value is the number of parameters to read
Max_User_Prm_Data_Len = 34
Ext_User_Prm_Data_Const(0)=
0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,\
0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,\
0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,0x00,\
0x00,0x00,0x00,0x00
Ext_User_Prm_Data_Ref(1)=1
Ext_User_Prm_Data_Ref(2)=2
Ext_User_Prm_Data_Ref(3)=3
Ext_User_Prm_Data_Ref(4)=4
Ext_User_Prm_Data_Ref(5)=5
Ext_User_Prm_Data_Ref(6)=6
Ext_User_Prm_Data_Ref(7)=7
Ext_User_Prm_Data_Ref(8)=8
Ext_User_Prm_Data_Ref(9)=9
Ext_User_Prm_Data_Ref(10)=10
Ext_User_Prm_Data_Ref(11)=11
Ext_User_Prm_Data_Ref(12)=12
Ext_User_Prm_Data_Ref(13)=13
Ext_User_Prm_Data_Ref(14)=14
Ext_User_Prm_Data_Ref(15)=15
Ext_User_Prm_Data_Ref(16)=16
Ext_User_Prm_Data_Ref(17)=17
Ext_User_Prm_Data_Ref(18)=18
Ext_User_Prm_Data_Ref(19)=19
Ext_User_Prm_Data_Ref(20)=20
Ext_User_Prm_Data_Ref(21)=21
Ext_User_Prm_Data_Ref(22)=22
Ext_User_Prm_Data_Ref(23)=23
Ext_User_Prm_Data_Ref(24)=24
Ext_User_Prm_Data_Ref(25)=25
Ext_User_Prm_Data_Ref(26)=26
Ext_User_Prm_Data_Ref(27)=27
Ext_User_Prm_Data_Ref(28)=28
Ext_User_Prm_Data_Ref(29)=29
Ext_User_Prm_Data_Ref(30)=30
Ext_User_Prm_Data_Ref(31)=31
Ext_User_Prm_Data_Ref(32)=32
Ext_User_Prm_Data_Ref(33)=33
;
; Diagnostic def
```

```
;
Unit_Diag_Bit(0) = "SCANport device not online" ; strings for
diagnostics
;
; Definitions of physical slots
;
; Module Word Input Image
;
Module = "Adptr In/Datalinks - 11 Words" 0x5A
EndModule
Module = "Adapter Status - 10 Words" 0x59
EndModule
Module = "Parameter Values - 16 Words" 0x5F
EndModule
;
; Module Word Output Image
;
Module = "Adptr Out/Datalinks - 13 Words" 0x6C
EndModule
```

## Appendix E : Profibus Data Image Details


### E.1 : Adapter Input Image (Read from 1560-PDP)

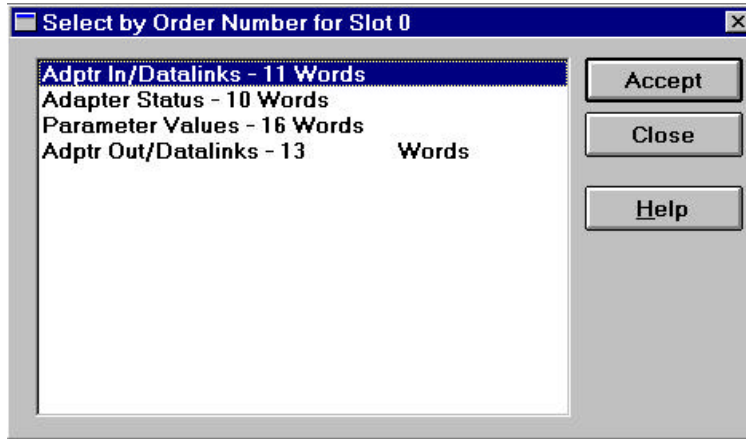

Word	Name	Description
0	Diagnostic Control Byte	(Future)
1	Status Word	This word should be verified in the A-B user manual for the particular device being controlled.
2	Feedback Value	This word should be verified in the A-B user manual for the particular device being controlled.
3	Datalink - A1	Adapter I/O (*Number of Datalinks set by DIP switch)
4	Datalink - A2	Adapter I/O (*Number of Datalinks set by DIP switch)
5	Datalink - B1	Adapter I/O (*Number of Datalinks set by DIP switch)
6	Datalink - B2	Adapter I/O (*Number of Datalinks set by DIP switch)
7	Datalink - C1	Adapter I/O (*Number of Datalinks set by DIP switch)
8	Datalink - C2	Adapter I/O (*Number of Datalinks set by DIP switch)
9	Datalink - D1	Adapter I/O (*Number of Datalinks set by DIP switch)
10	Datalink - D2	Adapter I/O (*Number of Datalinks set by DIP switch)




**E.2 : Adapter Status Image (Read from 1560-PDP)**

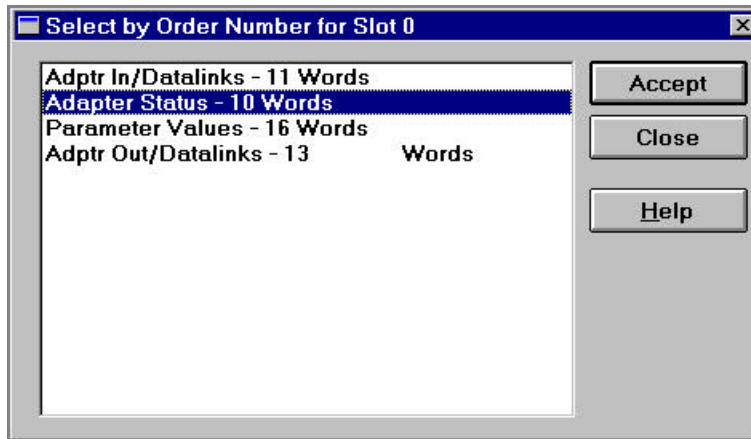

Word	Name	Values	Description
0	SCANport Status	0 = Offline 1 = Online	Indicates if 1560-PDP is logged into the drive. If drive is powered down or if SCANport cable becomes disconnected, the value will go to offline
1	Control/Reference Command Counter	0 to 0xFFFF	This is a rollover counter which increments each time the 1560-PDP received a Status word update from the SCANport device
2	Datalink A update counter	0 to 0xFFFF	This is a rollover counter which increments each time the Datalink A update is received from the SCANport device
3	Datalink B update counter	0 to 0xFFFF	This is a rollover counter which increments each time the Datalink B update is received from the SCANport device
4	Datalink C update counter	0 to 0xFFFF	This is a rollover counter which increments each time the Datalink C update is received from the SCANport device
5	Datalink D update counter	0 to 0xFFFF	This is a rollover counter which increments each time the Datalink D update is received from the SCANport device
6	Parameter Read Update Counter	0 to 0xFFFF	This is a rollover counter which increments each time a Rad Parameter command is received from the SCANport device
7	Parameter Write Update Counter	0 to 0xFFFF	This is a rollover counter which increments each time a Write Parameter command is executed
8	Profibus Status		(Future)
9	Product Revision		Provides the firmware revision level. The data should be viewed in hex mode


**E.3 : Parameters Image (Read from 1560-PDP)**

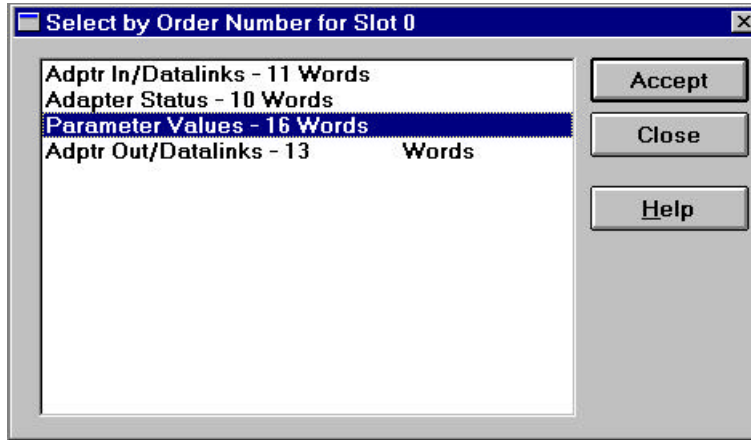

Word	Name
0	Parameter Value #1
1	Parameter Value #2
2	Parameter Value #3
3	Parameter Value #4
4	Parameter Value #5
5	Parameter Value #6
6	Parameter Value #7
7	Parameter Value #8
8	Parameter Value #9
9	Parameter Value #10
10	Parameter Value #11
11	Parameter Value #12
12	Parameter Value #13
13	Parameter Value #14
14	Parameter Value #15
15	Parameter Value #16

Up to two Parameter Read Blocks can be configured in the host read as 2 16 word blocks.

**E.4 : Adapter Output Image (Write to 1560-PDP)**

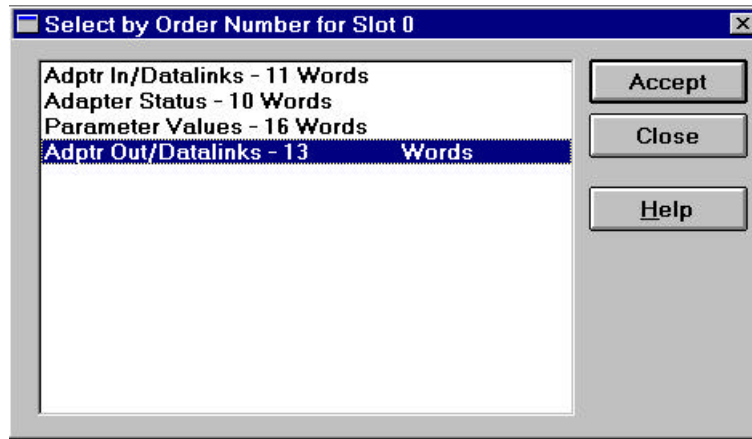

Word	Name	Description
0	Diagnostics Control Byte	When writing to a parameter enter a value of (0x10h) This will oneshot the parameter value
1	Logic Control Word	This word should be verified in the A-B user manual for the particular device being controlled.
2	Reference Control	This word should be verified in the A-B user manual for the particular device being controlled.
3	Datalink - A1	Adapter I/O (*Number of Datalinks set by DIP switch)
4	Datalink - A2	Adapter I/O (*Number of Datalinks set by DIP switch)
5	Datalink - B1	Adapter I/O (*Number of Datalinks set by DIP switch)
6	Datalink - B2	Adapter I/O (*Number of Datalinks set by DIP switch)
7	Datalink - C1	Adapter I/O (*Number of Datalinks set by DIP switch)
8	Datalink - C2	Adapter I/O (*Number of Datalinks set by DIP switch)
9	Datalink - D1	Adapter I/O (*Number of Datalinks set by DIP switch)
10	Datalink - D2	Adapter I/O (*Number of Datalinks set by DIP switch)
11	Parameter Number Write	Enter the value for the parameter you wish to write to (Parameter 112 – 112)
12	Parameter Value	Enter the value to set the parameter to

**Writing A Parameter**

1. Enter the parameter number into word 11
2. Enter the parameter value into word 12
3. Enter value 0x10h in word 0 (This will oneshot the value to the parameter)
4. Clear word 0