



DH485 Router/B


Quick Start Guide

A-DH485R/B

NOTE: Before installing, configuring, operating, or maintaining Aparian products, please review this information and the information located on www.aparian.com for the latest software, documentation, and installation files specific to your Aparian product.

INTRODUCTION

This manual describes the installation, operation, and diagnostics of the Aparian DH485 Router Series B. The DH485 Router/B provides intelligent data routing between EtherNet/IP and DH485 which can help simplify the migration from MicroLogix and SLC systems to ControlLogix or CompactLogix platforms, where a DH485 interface is required. The DH485 Router/B can also be used to connect newer PanelView Plus and PanelView 800 devices to a range of Rockwell Automation controllers. This is especially useful where newer PanelView Plus devices (supporting only Ethernet) are required to connect to controllers (new and old) via DH485.

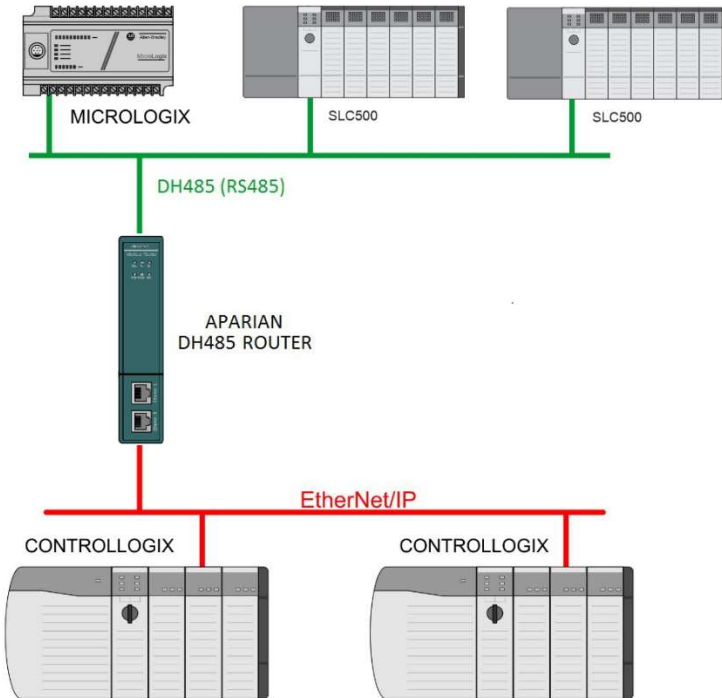


REQUIRED SOFTWARE

The DH485 Router/B requires Aparian Slate software to setup and configure. The software installation can be found at www.aparian.com/software/slate.

MODULE INSTALLATION

The module has two Ethernet ports located at the lower front of the module. There are also two ports at the bottom of the module for RS232/RS485 serial and power. The power port uses a three-way connector which is used for the DC power supply positive and negative (or ground) voltage as well as the earth connection.

The nine-way connector is used to connect the RS232 and RS485 conductors for serial communication. The shield terminal can be used for shielded cable in high noise environments.

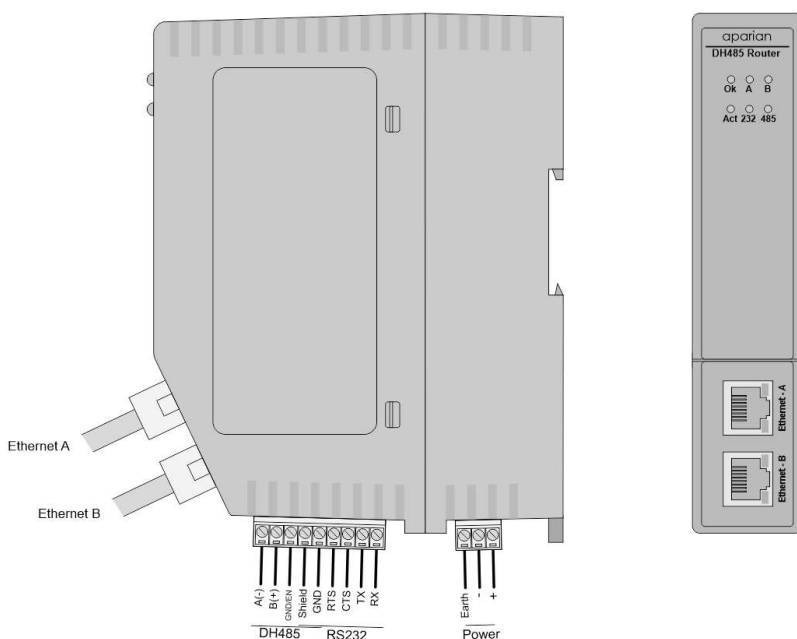

LED	Description
Ok	<p>The module LED will provide information regarding the system-level operation of the module.</p> <p>If the LED is red, then the module is not operating correctly. For example, if the module application firmware has been corrupted or there is a hardware fault the module will have a red Module LED.</p> <p>If the LED is green (flashing), then the module has booted and is running correctly without any application configuration loaded.</p>

	If the LED is green (solid) , then the module has booted and is running correctly with application configuration loaded.
A / B	The Ethernet LED will light up when an Ethernet link has been detected (by plugging in a connected Ethernet cable). The LED will flash every time traffic is detected. This module has two Ethernet ports A and B. Each LEDs represents each specific port.
Act	The activity LED is used for the DH485 Routing. Every time there is a successful DH485 routing transaction the LED will flash green. The LED will flash red if the routing was unsuccessful (e.g. Logix Tag does not exist).
232	The 232 LED is used for the RS232 port. Every time there is a successful DH485 packet on RS232 the LED will flash green. The LED will flash red if the DH485 packet failed (e.g. checksum failure).
485	The 485 LED is used for the RS485 port. Every time there is a successful DH485 packet on RS485 the LED will flash green. The LED will flash red if the DH485 packet failed (e.g. checksum failure).

RS485 TERMINATION

All RS485 networks need to be terminated at the extremities (start and end point) of the communication conductor. The termination for the RS485 network can be enabled/disabled via the module configuration. Enabling the termination will connect an internal 125 Ohm resistor across the positive (+) and negative (-) conductors of the RS485 network.

ELECTRICAL AND ENVIRONMENTAL

Specification	Rating
Power requirements	Input: 10 – 32V DC, (121 mA @ 24 VDC)
Power consumption	3.1 W (Including full load on USB of 200mA) 67 mA maximum
Temperature	-20 – 70 °C

STUDIO 5000 CONFIGURATION

The module must be added to the Logix IO tree using a Generic Ethernet Module Profile.

NORTH AMERICAN HAZARDOUS LOCATION APPROVAL

SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C AND D HAZARDOUS LOCATIONS, OR NONHAZARDOUS LOCATIONS ONLY.

WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITABLE CONCENTRATIONS.

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF ANY COMPONENT MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.



For professional users in the European Union

If you wish to discard electrical and electronic equipment (EEE), please contact your dealer or supplier for further information.



WARNING – Cancer and reproductive harm – www.p65warnings.ca.gov

ADDITIONAL INFORMATION

The following resources contain additional information that can assist the user with the module installation and operation.

Resource	Link
Slate Installation	http://www.aparian.com/software/slate
DH485 Router User Manual DH485 Router Datasheet Example Code & UDTs	http://www.aparian.com/products/dh485routerb
Ethernet wiring standard	www.cisco.com/c/en/us/td/docs/video/cds/cde/cde_205_220_420/installation/guide/cde205_220_420_hig/Connectors.html
CIP Routing	The CIP Networks Library, Volume 1, Appendix C:Data Management
Map PLC/SLC messages	SLC to CompactLogix Migration Guide: Chapter 3 – Map PLC/SLC Messages (1769-ap001_-en-p.pdf) EtherNet/IP Network Configuration: Chapter 5 – Mapping Tags (enet-um001_-en-p.pdf)

SUPPORT

Technical support will be provided via the Web (in the form of user manuals, FAQ, datasheets etc.) to assist with installation, operation, and diagnostics.

For additional support the user can use either of the following:

Contact Us web link	https://www.prosoft-technology.com/Services-Support/Customer-Support
Support email	support@prosoft-technology.com